

1. BEFORE YOU BEGIN

A. INTRODUCTION

Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will aid you in avoiding the unnecessary expense associated with improper installation.

All information in these instructions is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

These instructions contain important warranty information - please leave instructions for the consumer.

B. NOTES

- Ancora bath hangers are specifically designed to work with cast iron baths.
- K-1175 Ancora bath hanger is for mounting flush on to studding, furring strips, and flat walls.
- K-1176 Ancora bath hanger is for mounting on side of studding.

C. REQUIRED TOOLS AND MATERIALS

- Safety glasses
- Electric drill with assorted drill bits
- Screwdriver and screws
- Level and square
- Rule and marking pencil

D. PURPOSE

Kohler Ancora bath hangers are made of steel, with an upper and lower shelf and are easily installed. They provide maximum support, while holding the bath securely against the wall.

The bath hangers prevent sag and pull away, which avoids unsightly cracks and water seepage into the wall area. They are practical for use on studding, furring strips, and flat walls.

2. INSTALLATION SEQUENCE

A. SITE PREPARATION

See Fig. #1. Ancora bath hangers can be used in two types of framing construction, recessed and corner.

All framing shown is wood 2x4 construction, modifications may be required for other types of construction material.

All framing construction must be squared and plumb.

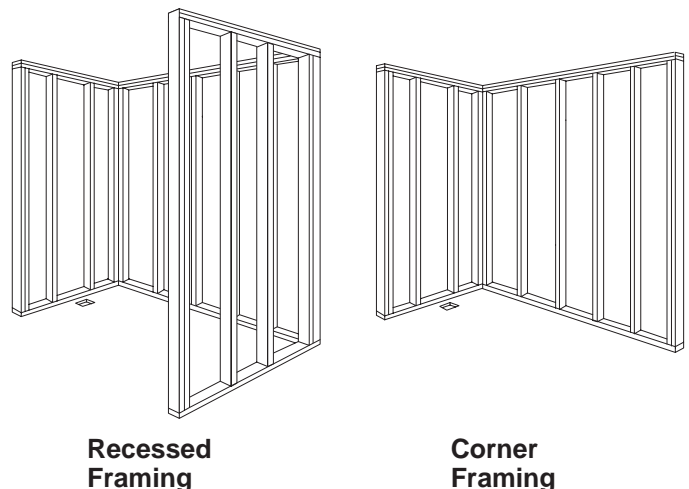



Fig. #1

B. BATH HANGERS

See Fig. #2. Select the hanger that best suits your type of framing construction.

The K-1175 is for mounting flush on to studding, furring strips, and flat walls.

The K-1176 is for mounting on side of studding.

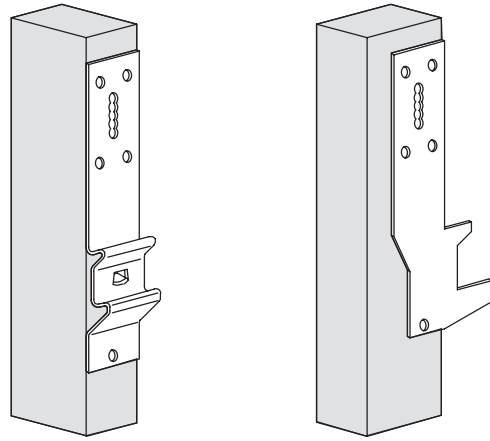

K-1175


K-1176

Fig. #2

C. BATH HANGER LOCATION

See Fig. #3. In a recessed installation, four Ancora bath hangers are required.

Note the locations, indicated by the arrows.

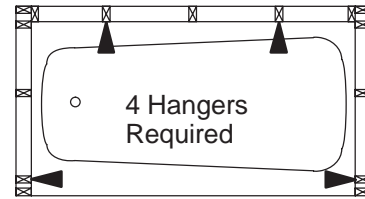


Recessed Installation

Fig. #3

D. BATH HANGER LOCATION

See Fig. #4. In a corner installation, three Ancora bath hangers are required.

Note the locations, indicated by the units by the arrows.

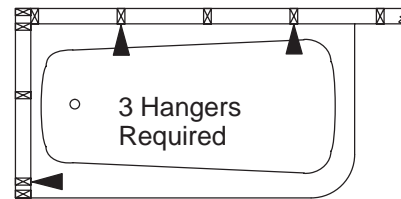

Corner Installation

Fig. #4

E. BATH HANGER INSTALLATION

See Fig. #5. To locate correct height of bath hangers, position the upper shelf of the bath hanger a little lower than the underside of the rim of the bath.

Temporarily attach bath hangers to studding, by inserting a screw into the top of the elongated slot and tighten.

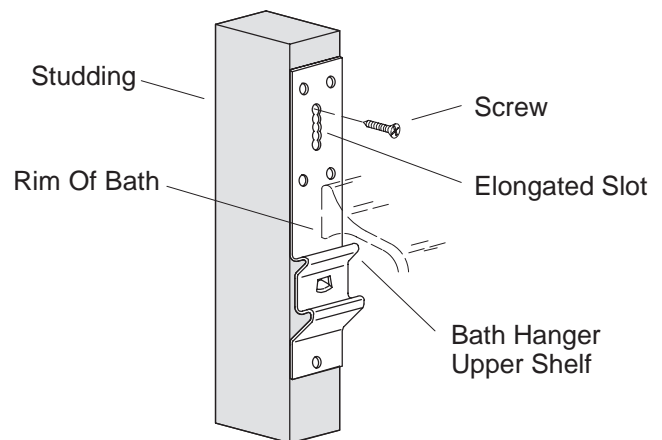


Fig. #5

See Fig. #6. Set bath into position. Bath must be level and resting on all feet. Check for level along the top of the apron and across drain end.

Shim under bath feet with metal shims to level.

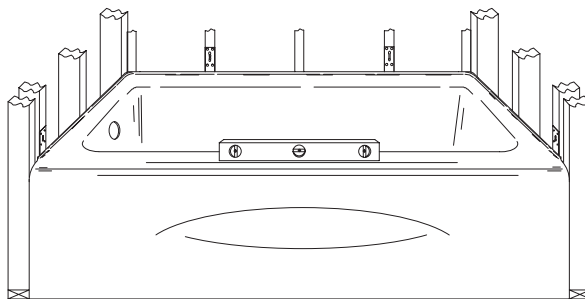


Fig. #6

See Fig. #7. After bath is leveled, loosen screw in elongated slot in the bath hanger. Raise bath hanger until upper shelf of bath hanger supports rim of bath.

Secure screw in elongated slot and install additional screws to firmly anchor the bath hanger to studding.

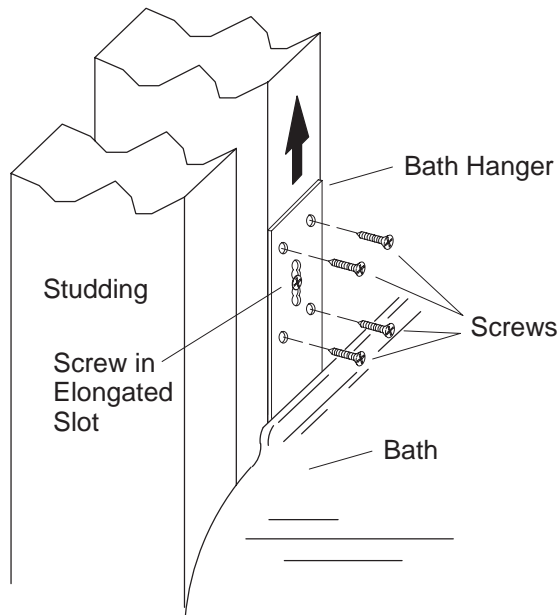


Fig. #7

3. IMPORTANT CONSUMER INFORMATION

A. REQUESTING SERVICE

Please take a moment to familiarize yourself with the Kohler Warranty, its benefits, and limitations. Kohler Co. and its distributors support you with one of the largest Service Networks of its type. Here's what you need to do if you require service:

FIRST: Contact the dealer or contractor who sold and installed the product. They should be able to solve any problems you may have.

SECOND: If your dealer or contractor cannot solve the problem, they will contact or supply you with the name of the local Kohler Distributor and the:

 KOHLER TECHNICAL SPECIALIST

THIRD: If you are unable to obtain warranty service through either your contractor or Kohler Co. distributor, please write us directly at Kohler Co., Attn: Consumer Affairs Department, Kohler, WI 53044 U.S.A.

FOURTH: Include all pertinent information regarding your claim, including a complete description of the product, model numbers, colors, finishes, and the date the product was installed. Include a description of the problem, and a photocopy of your invoice for the products involved. Also give us the name of the contractor and distributor.

B. LIMITED ONE-YEAR WARRANTY

Kohler plumbing fixtures and fittings are warranted free of manufacturing defects.

Kohler Co. will, at its election repair, replace, or make appropriate adjustment where Kohler Co. inspection discloses any such defects occurring in normal usage within one year after installation. Kohler Co. is not responsible for installation costs.

To obtain warranty service, contact Kohler Co. either through your Dealer or Plumbing Contractor or by writing Kohler Co., Attn: Consumer Affairs Department, Kohler, WI 53044 U.S.A.

Implied warranties, including that of merchantability, are expressly limited in duration to the duration of this warranty. Kohler Co. disclaims any responsibility for consequential damages.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so this limitation and exclusion may not apply to you. This warranty gives you specific legal rights. You may also have rights which vary from state to state.

This is our exclusive written warranty.

KOHLER CO., KOHLER, WISCONSIN 53044