


ASSEMBLY INSTRUCTIONS

1/4 IPS threaded nipple pipe
(Not provided)

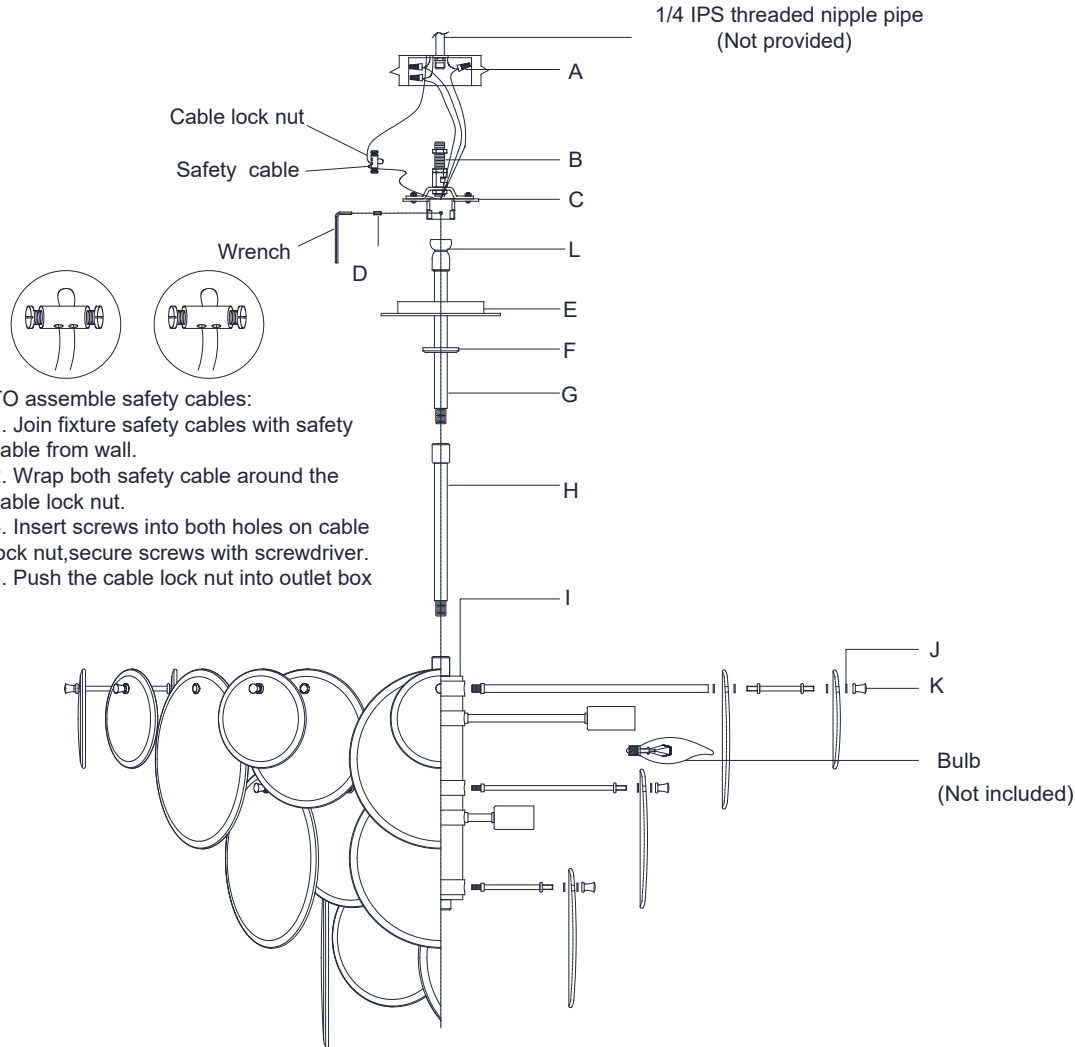

TO assemble safety cables:

1. Join fixture safety cables with safety cable from wall.
2. Wrap both safety cable around the cable lock nut.
3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
4. Push the cable lock nut into outlet box

Loire Large Chandelier

Item # ARN 5450

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.


ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. A 1/4 IPS pipe must be installed through the junction box and secured to a structural member of the building. This item must hang independently of the junction box. Then install the threaded nipple (B) into the 1/4 IPS PIPE.
3. Feed the fixture wires and safety cable through the rod (H), then thread the rod (H) to the top of fixture body (I).
4. Feed the fixture wires and safety cable through the collar ring (F) and canopy (E) and rod (G). Then thread the rod (G) to the rod (H).
5. Hang the fixture swivel ball (L) to the center of the mounting plate (C) and secure with set screw (D) using the wrench.
6. Connect the fixture ground wire to the ground wire in the junction box using the wire nut (A). IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
7. Connect the fixture ribbed wire (no markings) to the neutral wire in the junction box using the wire nut (A).
8. Connect the fixture smooth wire (with markings) to the hot wire in the junction box using the wire nut (A).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
9. Carefully tuck the wire connections into the junction box.

ASSEMBLY INSTRUCTIONS

1/4 IPS threaded nipple pipe
(Not provided)

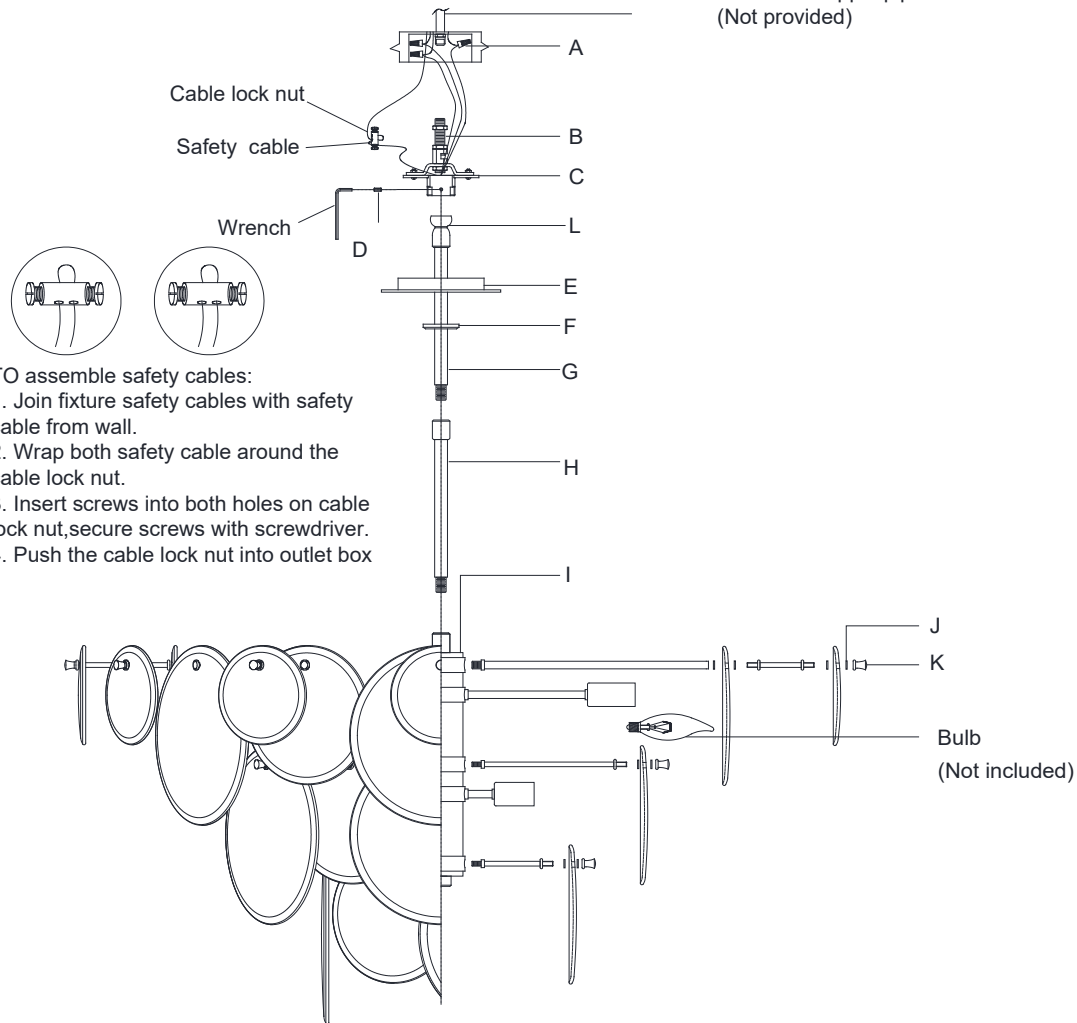

TO assemble safety cables:

1. Join fixture safety cables with safety cable from wall.
2. Wrap both safety cable around the cable lock nut.
3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
4. Push the cable lock nut into outlet box

Loire Large Chandelier

Item # ARN 5450

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.









ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

10. Install the canopy (E) to the ceiling and secure with collar ring (F).
11. Insert bulbs (not included) into the sockets.
12. Assemble the glass disks as shown in the below figure.
13. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

ASSEMBLY INSTRUCTIONS

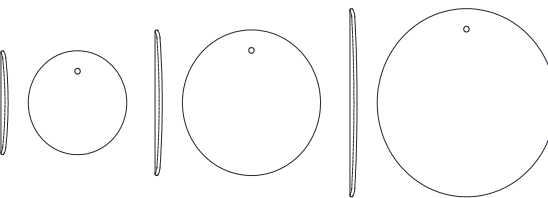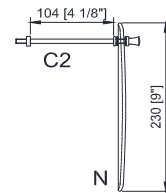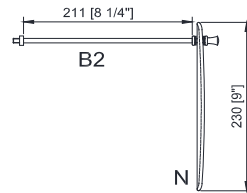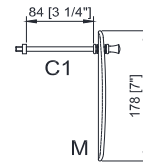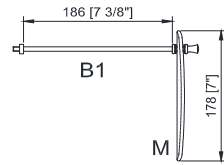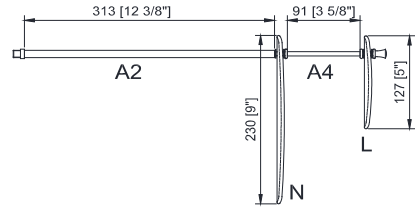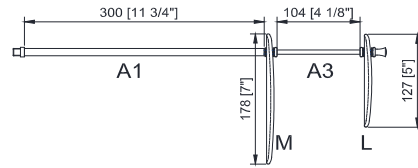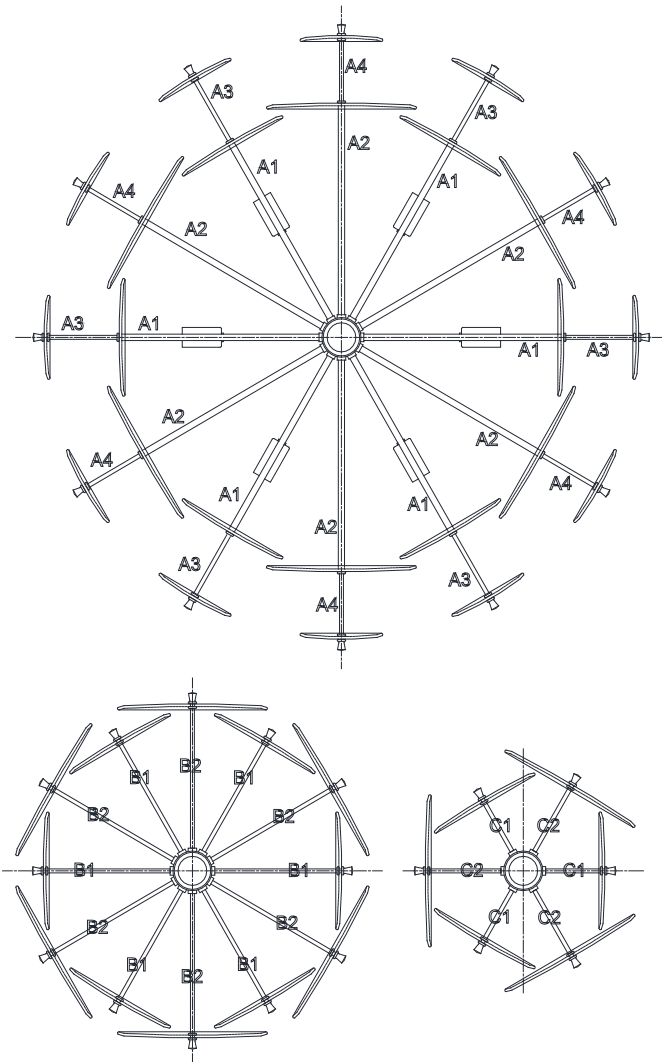

L 12PCS

M 15PCS

N 15PCS

Loire Large Chandelier

Item # ARN 5450

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

To assemble the metal rod and glass disk:

1. Thread the metal rods (A1) and (A2) to the center tube.
Please note that all the metal rods (A1) are located above the first tier sockets.
2. Thread the metal rods (B1) and (B2) to the center tube.
Please note that all the metal rods (B1) are located under the metal rods (A1), and all the metal rods (B2) are located under the metal rods (A2).
3. Thread the metal rods (C1) and (C2) to the center tube.
Please note that all the metal rods (C1 & C2) are located under the metal rods (B1).
4. Remove the finial (K) from the metal rods (C1), attach the rubber washer (J) to either side of glass disks (M) and secure to the metal rods (C1) and with the finial (K).
5. Repeat above step to install the glass disks (N) to the metal rod (C2).
6. Remove the finial (K) from the metal rods (B1), attach the rubber washer (J) to either side of glass disks (M) and secure to the metal rods (B1) and with the finial (K).
7. Repeat above step to install the glass disks (N) to the metal rod (B2).
8. Remove the metal rods (A3) from the metal rods (A1), Attach the rubber washer (J) to either side of glass disks (M) and secure to the metal rods (A1) and with the metal rods (A3).
9. Remove the finial (K) from the metal rods (A3), attach the rubber washer (J) to either side of glass disks (L) and secure to the metal rods (A3) and with the finial (K).
10. Repeat above step to install the glass disks (N) and glass disks (L) to the metal rod (A2) and metal rod (A4).

VISUAL COMFORT

