
## **ASSEMBLY INSTRUCTIONS**



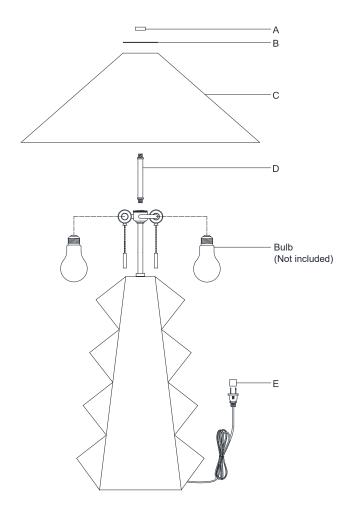

Item # KW 3681

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL, IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND **INSTALLATION ARE FINAL.** 

- 1. Carefully remove all parts from the box.
- 2. Thread the shade riser (D) to the top opening of the fixture body.
- 3. Place the shade (C) (packaged separately) to the shade riser (D) and secure with the metal diffuser (B) and finial (A).
- 4. Insert bulbs (not included) into the socket.
- 5. Remove the protective plug cover (E) from the plug.
- 6. Plug into a proper electrical outlet and test the fixture.
- 7. Installation is complete.

\*\*\*Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.







